

KX3 KIT ASSEMBLY MANUAL ERRATA

Rev. H-2, February 3, 2017

E740164E

MAKE THESE CHANGES TO YOUR REV H MANUAL BEFORE BEGINNING ASSEMBLY

1. **Page 14:** Make a note between the first and second check box on this page to refer to this errata and complete the following steps before continuing:

Locate the rubber washer E700046. If it has paper attached to one side, carefully remove it (See below).

IF PRESENT, CAREFULLY REMOVE
THE PAPER FROM THE WASHER



Place the washer on the VFO B encoder as shown below.

PLACE THE WASHER ON THE
VFO B ENCODER. PRESS IT
DOWN OVER THE THREADS
SO IT RESTS AGAINST THE
BODY OF THE ENCODER.
EITHER SIDE MAY FACE UP.



Continue on with the assembly starting with step 2 on page 14.

Page 17: Make a note at the bottom of the page to perform the following step before continuing:

- Screw the ring nut (E700233) onto the VFO B encoder. Screw it down against the front panel, but do not over-tighten. Do not use a wrench. Finger tight is ideal.



RING NUT. NO LOCK WASHER.
⚠ FINGER TIGHT ONLY. DO NOT USE A WRENCH.

- 2. Page A4 (Parts List), Front Panel (Top Cover) Hardware (E850532):** Add the following parts:

ILLUSTRATION	DESCRIPTION	QTY.	ELECRAFT PART NO.
	Washer, Rubber 0.25 ID X .625 OD	1	E700046
	Ring-Nut, Slotted M7 X 0.75	1	E700233

- 3. Page A6 (Parts List):** Change the part number of the power cord (7th item from the top of the list) from E850524 to E740775. Add “1” in the quantity column.