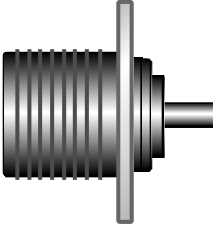
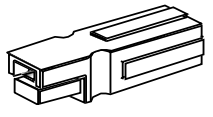
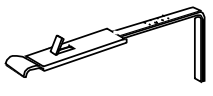
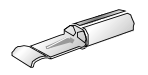
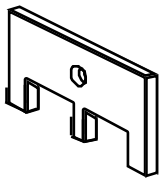



# K2/100 (Appendix G) MANUAL ERRATA


Rev. H2-1, April 29, 2016 (E740035E)

## MAKE THESE CHANGES TO YOUR REVISION H1 MANUAL BEFORE YOU BEGIN ASSEMBLY

- Page 6 (Parts List), Line for Reference Designator “C27”:** In the description, change “...tan color.” to “...yellow color”.
- Page 6 (Parts List), Line for Reference Designator “C1”:** In the description change “...tan color” to “...white color”.
- Page 7 (Parts List):** The images are shifted. The lines should be as follows:

	J2	1	Connector, SO239 (Antenna)	E620064
	J3, P3	2	Connector, DC power, red housing (13.8 VDC input and mating conn., +)	E620059
	J3, P3	2	Connector, DC power, black housing (13.8 VDC input and mating conn., -)	E620060
	MISC	2	PCB pin for J3, 25 amp right angle	E620061
	MISC	2	Crimp/solder terminal for P3, 30 amps	E620062
	HDWR	2	Mounting plate for J3	E620063
	MISC	1	Spring pin, 3/32" x 1/4" (2.4 x 6.4 mm); stabilizing pin for P3	E700071

- Page 8, ( Parts List) :** The image for the keying insert should be as follows;


	MISC	2	Keying insert for ribbon cable connector (Shown approx. 4x actual size; may include large break-away tab)	E700065
---	------	---	--	---------

**5. Page 17, Right Column:** Replace the last two steps with the following. You can cut them out and paste them over the existing steps on the page.

Install the ceramic trimmer capacitors, C1 and C27. C1 is supplied in a separate envelope C27 is loose in the bag.. Orient the flat side of each trimmer as shown below:

\_\_ Install C1 (white). The location for C1 is at the far left near the small notch.

\_\_ Install C27 (yellow). The location for C27 is near the microcontroller, U1 (16F872).

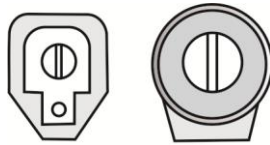

**FLAT SIDE**

Using a small flat-blade screwdriver, set both trimmers to their midpoints (screwdriver slot perpendicular to the flat side as shown above).